

TESTING INSTRUMENTS FOR
A MEASURABLE DIFFERENCE...

IDM
instruments

CLICKER PRESS

C0056 SERIES



INTRODUCTION

These economically priced Clicker Presses are used for a wide variety of die cutting applications. The Clicker Press machines are completely hydraulic and are made of strong casting material to ensure powerful yet quiet running. The Clicker Press casting also insures maximum beam strength and performance. All moving parts are made of hardened steel and are self-lubricating. There are many models available ranging from 20-27 tons with bed sizes up to 1000mm x 500mm and cutting heads up to 600mm in width.

To guarantee maximum visibility of the material, the swing beam can be easily moved left-right by the operator in order to collect the die cut pieces and re-position the tool for the next cut.

FEATURES

- Automatic stroke end setting
- Different height cutting die without adjustment
- Control push buttons with built in device
- Overload protection
- High speed and low energy consumption
- Ductile cast iron body made the machine durable and work quietly.


APPLICATIONS

- Cardboard
- Cork
- Foam
- Leather
- Paper
- Plastic
- Rubber

MODELS & SPECIFICATIONS

	IDM-C0056-M1	IDM-C0056-M2	IDM-C0056-M3	IDM-C0056-M4
Cutting Table Area	900 x 430mm	1000 x 500mm	1000 x 500mm	1000 x 500mm
Arm Width	370mm	370mm	500mm	610mm
Tonnage	20T	27T	27T	27T
Maximum Stroke	90mm	90mm	90mm	90mm
Motor	1.1 kW	1.5 kW	1.5 kW	1.5 kW
Power	3Hp 415V	3Hp 415V	3Hp 415V	3Hp 415VProduct
Product Dimensions	900 x 820 x 1400mm	1000 x 1020 x 1400mm	1000 x 1020 x 1400mm	1000 x 1020 x 1400mm
Product Weight	650kg	960kg	1050kg	1200kg
Spare Cutting Boards	900 x 430mm	1000 x 500mm	1000 x 500mm	1000 x 500mm

DIMENSIONS

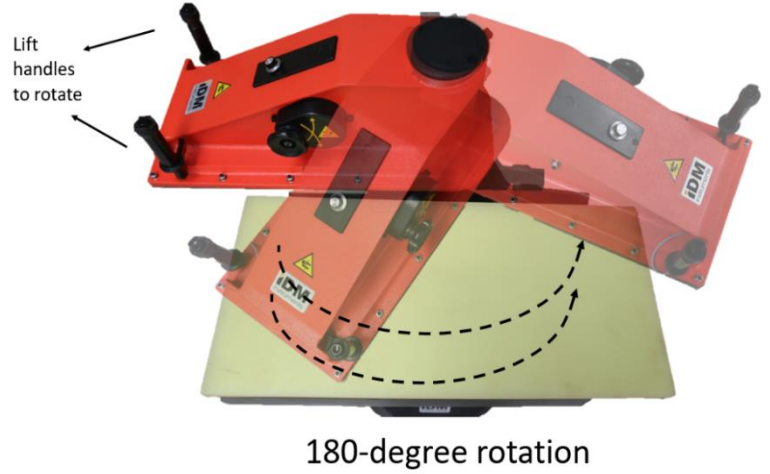

WARRANTY AND CALIBRATION SERVICES

- 1 year Warranty

Our **Preventive Maintenance and Calibration (PM&C) program** has been designed to make the maintenance and calibration of your valuable testing equipment more cost effective by preventing breakdowns and downtime by regular calibration, service and replacement of defective parts. Take to us about this today.


RELATED ITEMS

1. Use the C0024 Tool Steel Cutting Dies with the Clicker Press. The dies are designed to a range of Standards to suit a variety of testing methods.



IDM-C0024-M1

2. Use the Coefficient of Friction Tester to determine kinetic and static friction.

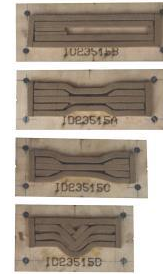

IDM-C0055 Series