

Polarising Box

Model: P0008

a measurable difference...

IDM[®]

instruments

The Polarising Box is used to view the stress points created during manufacture of clear plastic and glass products. The samples can also be extruded film.

The Polarising Box has two open sides so long items can be passed through.




Applications:

- Clear Plastic films
- Glass
- Clear Plastic Items *eg. Water bottles, disposable cutlery etc*



Safety Glasses

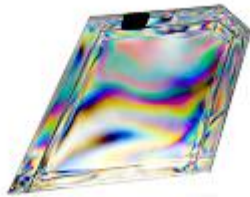

Enclosure



CD Tray

Features:

- Polarising Filter mounted at the top for viewing
- Light Source
- LED batten mounted at base with a diffuser as the sample support panel
- Long Life.
- Easily swap out the old battens for new ones.

Options:

- Custom Size Polarising Box
(Available on request)

Connections:

- **Electrical:** 220/240 VAC @ 50 HZ or
110 VAC @ 60 HZ
please specify when ordering

Dimensions:

- **H:** 400mm
- **W:** 400mm
- **D:** 400mm
- **Weight:** 7kg